


AutoXray AX7000 TechScan Update Instructions

1. Double click the **AutoXray Launchpad** icon on your desktop to open Scanning Suite. If you do not have the icon on your desktop, you can find it by going to **Start Menu/All Programs/Scanning Suite/AutoXray**.

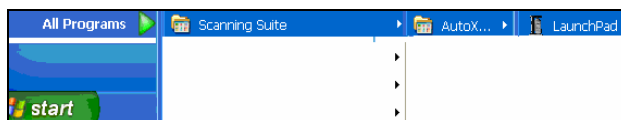


Or



2. Click **Tool Update**




3. The ScanLoader Wizard will open. Click **Next** to continue.

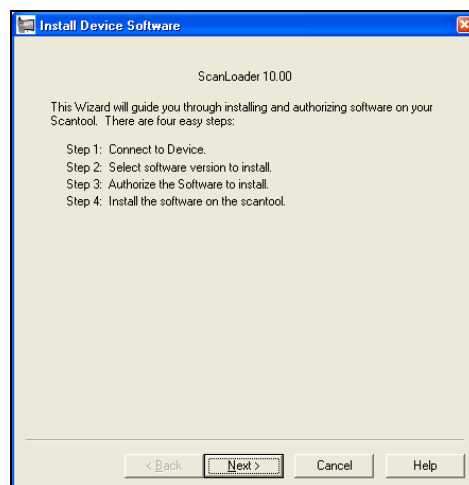


4. Connect your TechScan to the PC using the USB cable and power the tool on. In the tool **Main Menu**, arrow down to **System Setup**, press **ENTER**, arrow down to **Program Mode**, and press **ENTER**. Then follow the instructions on the screen to put the tool in **Program Mode**.


When the TechScan displays **PC PROGRAM MODE**, choose to connect to the tool **Automatically** (recommended) and click **Next**. You can also choose to **Manually** select the USB port and click **Next**.

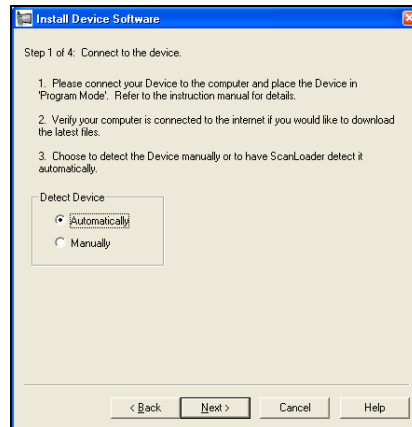


5. Wait while Scanning Suite checks for the newest tool software version.

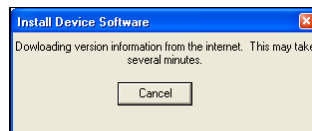

6. Choose which software version you would like to install and click **Next**.

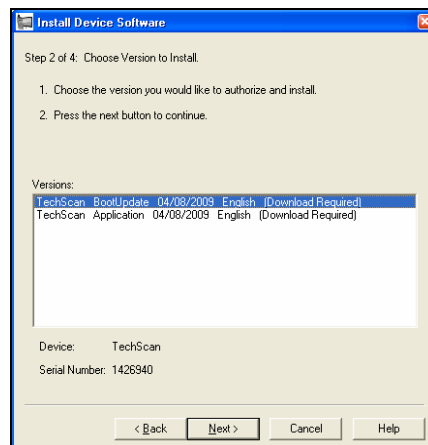


7. Wait while Scanning Suite downloads the version information.

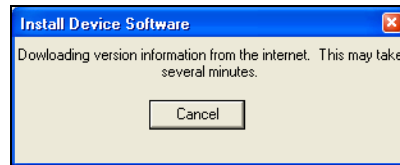


8. If you are installing a free software update, the software serial number and authorization code is not required. Simply click **Next** to continue.


If you have purchased an update, click the **Open Scanning Suite Update URL** button to obtain your authorization code.

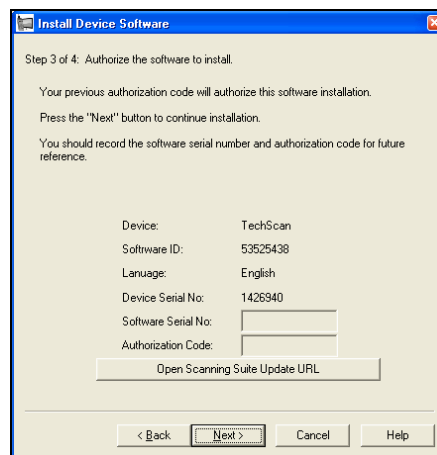


9. Click **Finish** to install the software on your TechScan.

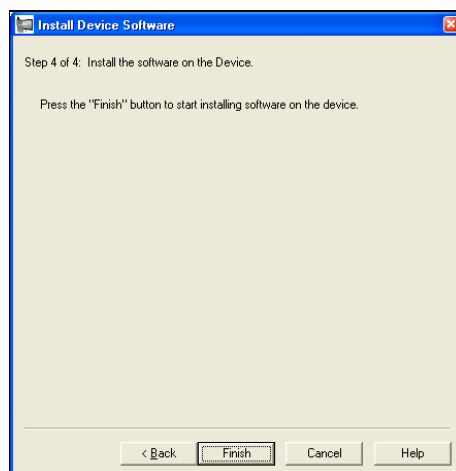

10. Wait while the tool is programmed.

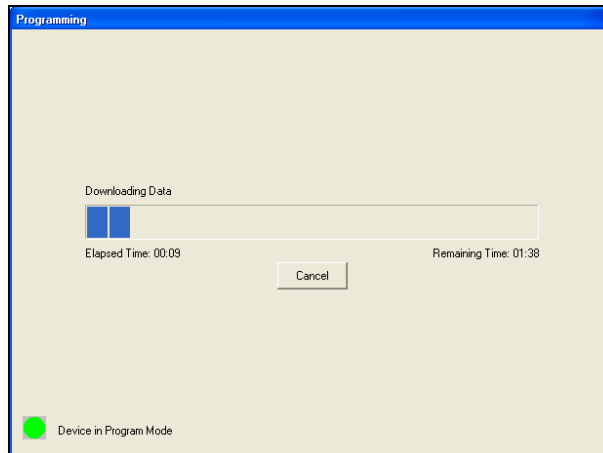

11. When the programming is complete, click **Done**.

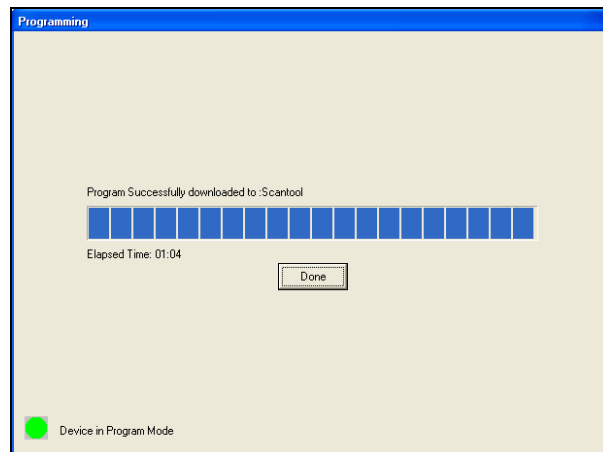

12. Shut down tool and disconnect it from your PC.

